

# Cybertruck Tonneau Cover

## User Guide



User acknowledges this tonneau cover is a prototype provided for evaluation and testing purposes only and is not a final production unit. The product is provided “as is,” without any warranty, express or implied, including but not limited to warranties of merchantability or fitness for a particular purpose. To the maximum extent permitted by law, the provider shall not be liable for any damages arising from the use or inability to use this product. Specifications and performance are subject to change. This product is not intended for commercial use or resale.

## Introduction

Thank you for selecting the Topstitch Marine Fabrics Cybertruck Tonneau Cover prototype. This tonneau cover is made with top of the line marine fabric known as Stamoid Top. Stamoid is a premium, high-tenacity vinyl-coated polyester marine fabric by Serge Ferrari designed for maximum durability in harsh environments. It is waterproof, mildew-resistant, and provides 100% UV protection. Known for being lightweight yet strong, it is ideal for enclosures, and covers.

Your Cybertruck tonneau cover comes with:

- 1 Stamoid Cover
- 4 Aluminum support bars
- 2 M8 Black Knurled Thumb Screws
- 2 Rubber Washers
- 2 M8 Nuts; 2 "R" clips
- 3 Adhesive Backed Velcro (App 60" ea)
- 1 Adhesive Primer



## Care and Handling of Your Topstitch Cybertruck Tonneau Cover.

### Stacking

**NEVER** stack or place items on your tonneau cover. Doing so could result in scratching, stretching, cutting or damaging your cover.

### Pre-Rinse

Spread out the fabric, pre-rinse the fabric with clear water. Moisten the fabric with a mild solution of gentle liquid soap and clean water or use a proper cleaning agent such as a Vinyl Cleaner.

### Brush Wash

Allow the cleaning solution to penetrate and gently brush the fabric to the edges using an **ALL NATURAL SOFT BRISTLE** brush. **DO NOT** use hard pressure during the brushing process as this may scratch or tear the vinyl.

### Rinse

Thoroughly rinse the entire fabric surface to remove any traces of the cleaning solution. In some cases of heavily soiled fabric, the cleaning procedure may need to be repeated followed by a thorough rinse.

### Drying

The Stamoid fabric should be fully stretched out to completely dry.

### Protecting your Tonneau Cover

When the fabric is completely dry, an application of vinyl protectant such as IMAR Stamoid Marine Vinyl Protective Cream should be added to the surface.

## Starting Your Installation:

Getting to know your tonneau cover: The top of your tonneau cover has a 4" aluminum bar sewn into it and measures approximately 59 1/8 inches wide. While the bottom measures approximately 62 inches wide and has a 1" stiffened seam at the bottom. Your cover has 4 support bar wraps sewn on underneath. The support bars are numbered 1 - 4. Bar number 1 will go to the top and are numbered sequentially as you go down the cover.



Step 1: With the tonneau cover rolled from the bottom up (The same way as you received it.), leave the top 4" bar free and insert the tonneau cover top in-between the 4" black bar at the top of your Cybertruck and the weather strip directly beneath it, as pictured below. Push the tonneau cover all the way up until the 4" aluminum bar inside your cover is all the way under the black 4" bar at the top of your Cybertruck.



Note: See Step 1: Video at <https://youtube.com/shorts/9yqYjtHEg0k>

Step 1 Cont.: Tonneau cover should look like this.



Note: Your Cybertruck will not yet have holes.

Step 2: While laying down in your Cybertruck bed you will see two holes in the tonneau cover, similar to the picture below. Stick a marker or pencil through the holes in your tonneau cover and mark the exact center of the holes. Completely remove tonneau cover and set aside. Now using a 1/8" drill bit, drill a hole through the black 4" metal strip on both sides.



Note: To help identify what you're looking at we removed the tonneau cover from the aluminum 4" bar and inserted the screw. However, you will be looking at the holes in your tonneau cover.

Step 3: Now that you have your two hole locations (with the tonneau cover removed) from the top side of your Cybertruck, re-drill (widen) those two starter holes using a 1/4" drill bit.



Step 4: Thoroughly clean the side rails of the Cybertruck where velcro will be attached, see picture (right). Allow to fully dry. Using the included tape primer stick, wipe down the right and left rail.

Step 5: Using the included velcro remove the plastic backing, exposing the rubber adhesive. Starting at the top place the velcro down pushing any gaps out ensuring it is straight and smooth. The velcro should be all the way up against the edge of the rail where it raises up. As you reach the bottom of the rail (near the tailgate) cut off any excess velcro. Velcro should not go past the end of the plastic railing. The top of this rail (near the cab) is narrower than the velcro, so you can cut off the excess velcro there as well. This should be done on both sides.

Step 6: Re-insert tonneau cover as you did in Step One. This time line up your new holes with the holes in the tonneau cover. Using the knurled thumb screws (ensuring the rubber washer is attached), screw into the tonneau cover and tighten down on the Cybertruck holding the tonneau cover in place. If desired attach included slotted nuts and "R" clips at this time.

**Note: Occasionally check the tightness of this thumb screw to ensure tonneau is secure and hold is water sealed.**

Step 7: With the tonneau cover top securely in place now, begin to roll down tonneau cover tightly and evenly ensuring no waves are in the fabric. Continue rolling down until you reach the first support wrap. Securely install support bar 1 in place as shown (below), and wrap tightly. Center support bar as best you can. You will be able to make slight adjustments to fit it in securely between the rails in the next step.

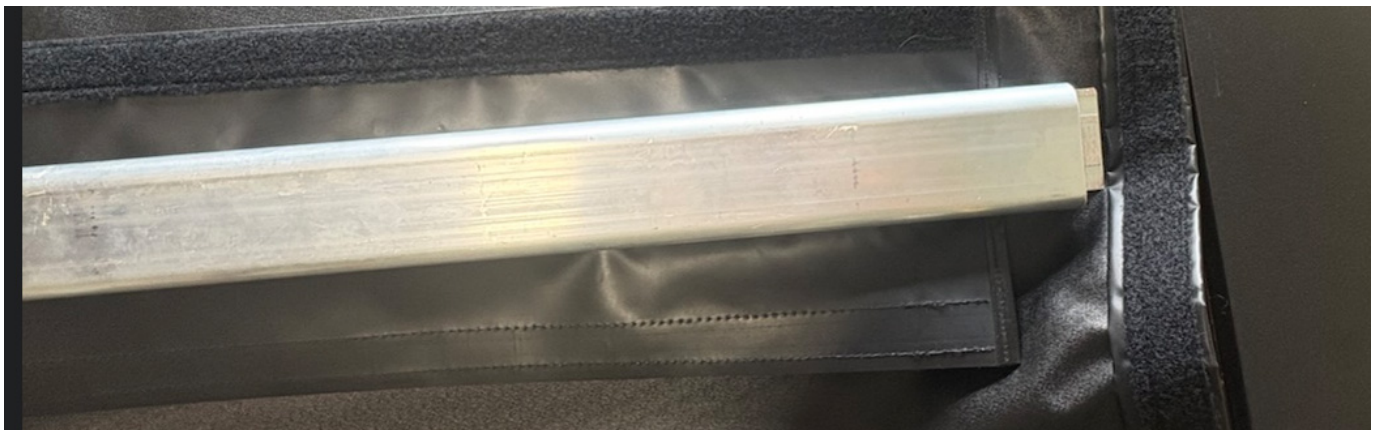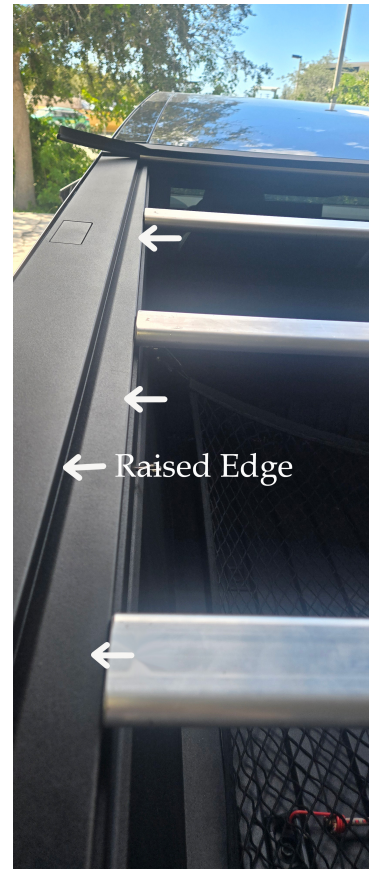

Step 7 cont: Once secured it should look similar to the picture right.

Step 8: Flip support bar over securing it between rails and ensure you've pulled cover tightly down toward tailgate. Support bar should fit snugly between rails and on top of velcro. A little play is ok. See below.



Step 9: Continue rolling down tonneau cover and securely wrap the support bars as you go. Ensure to use the correct numbered support bar (e.g. 2,3,4) each time.

**\* Remember support bars are numbered 1 to 4 from the cab to the tailgate.**

Once you've reached the bottom, flip the remaining part of the cover back so you can adhere velcro for the tailgate, as shown below.



Note: Before beginning Step 10 ensure you clean tailgate thoroughly. Tape primer is not required for tailgate.

Step 10: The loop portion of your velcro is sewn onto your tonneau cover. You should now take the remaining hook section you received and attach it to the flipped over section of velcro that runs the length of your tailgate. Now flip the tonneau cover down so the cover lands tightly on the tailgate. When you are happy with its positioning begin to remove the plastic backing exposing the rubber adhesive while firmly pressing down adhering the velcro to the tailgate. Keep removing the backing as you work toward the other side, firmly pressing down to adhere the velcro to the tailgate.

**IMPORTANT: Allow adhesive 24 to 72 hours to fully adhere before you begin removing and repositioning tonneau cover. Always remove tonneau cover with care so as you do not pull loop off of your Cybertruck. Adhesive may not be a permanent bond in all climates.**